

Toaster

User's Manual

1.Safety Guarding

1) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

2) The product can not be cleaned when the power is on. Unplug the toaster before maintaining.

3) Clean it when the toaster gets cooled inside. Do not use acid cleanser for cleaning.

This appliance shall not be cleaned with a water jet.

4) This product should be used by qualified people.

5) The operator should read user's manual carefully to get to know the functions, purposes and instructions.

6) User's manual should be kept properly for future reference.

7) This product can only be used for toast food. It is not proper for any other use.

2. Function

1. The toaster is an apparatus to toaster bread with the radiant heat by the electrified heating wire.

2. The area of the bread to be toasted should be 100mm×100mm×10mm and in respect of freshness, the bread is preferred to be stored for about 20 hours.

3. Generally and preferably take the bread after the slice is toasted to be brown.

3. Basic Parameters

Model	HET-4	HET-6	HET-01
Input voltage	220V	220V	220V
Power consumption	2.3kW	3.24kW	2.2kW
Timer range	0-5 min	0-5 min	0-5 min
Working selection	2 or 4 slices	3 or 6 slices	1 or 9 slices
Dimension	370×210×225mm	460×210×225mm	535×395×285mm
Weight	4kg	5kg	12kg

4. Instruction for Installation

1. The voltage of this product should be the same with the voltage of the power supply.

2. User should install a proper three-phase power outlet and a fuse.

3. Three-phase outlet must be well connected with the ground to ensure safety for electricity using.

5. Instruction for Operation

1. Place the toaster on the horizontal table stably.
2. When plug in the outlet, put bread slices into slots ①. Rotate the Timer ④ clockwise and preset the time.(The graduation set to the red point on the top of the Timer represents the time preset.) The green light ③ is on, which shows the apparatus is electrified and the heating wire is working to generate heat. Informed by a “Ting” sound when the bread heating is finished. Press Ejecting Switch ⑥ and the bread is leaped out.
3. During the heating period, crumbs of bread will fall down on the tray automatically and should be cleaned at once.
4. The size of the bread slice for heating must be bigger than the half of the whole slice and if too small, ejecting will be difficult.
5. On completion of the working process, the outlet should be unplugged and the electricity should be cut off.

6. Maintenance

1. The part easy to be worn out in the apparatus is the heating sheet.
2. When the bread slice does not turn to brown in the normal period during heating, it is represented that the heating sheet on this side is out of work and a new one should replace it.
3. The proper method for replacing the heating sheet is as following:
 - 1) Strip the 4 screws on the base plate using the screwdriver.
 - 2) Remove the 2 screws of the press plate of the heating sheet by screwdriver and take the press plate off.
 - 3) Replace the heating sheet.
 - 4) After the replacement, reinstall the press plate and the base plate.
4. If after the outlet is plugged in and the Timer ④ is rotated clockwise, and the green light ③ is not on, please check whether the outlet is electrified and the fuse is broken or not.
5. The replacement of the heating sheet and check of the circuit should be carried out by professional technicians. The user is suggested not to do it by himself or herself in case of unnecessary danger and damage.